

Installation Instructions

www.autotech.com

PART NUMBER: 10.715.200K, 10.715.210K

DESCRIPTION: Weighted Shift Rod

1. Open hood and locate the connecting link rod that runs between the relay lever and selector shaft lever. It will be a solid rod with two bends and will have a split pin at each end to hold it in place.
2. Remove the split pins and pull out the connecting link rod.
3. Apply a small amount of moly grease to the inside of the nylon bushings in the selector shaft lever and the relay lever.
4. With moly grease, lightly coat the areas of the Autotech Weighted Shift Rod where it will make contact with the nylon bushings when installed.
5. Notice that the bends in the connecting link rod are of two different angles. One angle will be 90 degrees, the other will be greater than 90 degrees. The same will apply to the Autotech Weighted Shift Rod. When installing the Autotech Weighted Shift Rod, the side with the greater angle will attach to the selector shaft lever.
6. Install the Autotech Weighted Shift Rod into the relay lever and selector shaft lever. Reinsert the split pins and you're done.

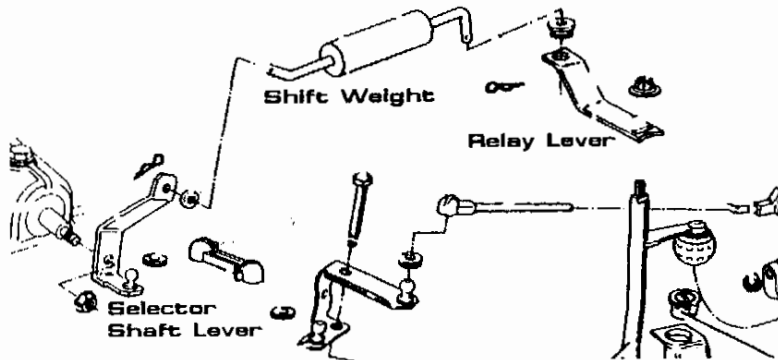


Diagram for A2 models. A1 models similar.