

A U T O T E C H

Installation Instructions

SPORT TUNING

www.autotech.com

Shock Therapy **Spark Plug Wire Instructions**

Part #: 10.998.220K

Tools required

- 13mm Socket
- Socket Wrench

1. Mark the firing order on the distributor cap (Firing order 1-3-4-2 counter clock wise).
2. Remove the old plug wires and coil wire.
3. Using the 13mm socket, loosen the nuts which hold both factory loom brackets.
4. Remove the brackets from the manifold.
5. Re-torque the second nut located on cylinder #2 (the nut that held the small bracket) to 15 ft./lbs.
6. Loosen the nut located on cylinder #3, then attach the Shock Therapy loom to the manifold and re-torque the nuts to 15 ft./lbs.
7. Connect the Shock Therapy wires to their designated firing order.
8. Figure B shows the Shock Therapy wires properly installed.

Note: You must install the spark plug wire loom as shown on Figure A.

Figure A

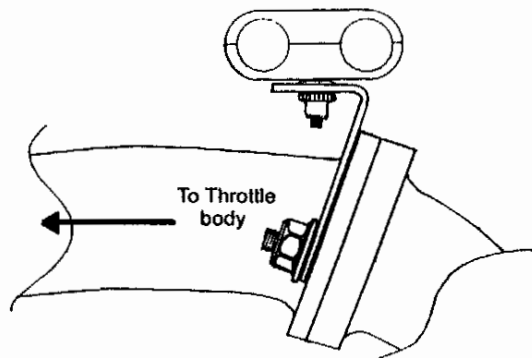


Figure B

