

Installation Instructions

sport tuningwww.autotech.com

Part Number: 10.998.230K; 10.998.232K
Description: SHOCK THERAPY® IGNITION WIRES, VR6

Notes:

Since they will obviously not fit within the grooves made for the stock wires, Autotech's Shock Therapy® wires for VR6 engines use seven "T-clips" to hold the massive 10.4mm diameter wires in position on the wire guide/engine cover. A self-tapping screw is used to mount each clip to the cover. No drilling is required.

T-Clip Installation -

Included with your wire set is 7 nylon clips: 6 dual and 1 single. Each is held to the stock plastic wire guide with a self-tapping screw. The short screws are used in the front engine bank's clips, the long screws in the rear bank's.

However, always use a long screw to make the hole for the clip. Once the hole is made, you can select the proper length screw, depending on where the clip is located.

Remove your stock wires ONE-AT-A-TIME, replacing each with a new Shock Therapy® wire before removing the next wire. This ensures that you maintain proper firing order (correct coil terminal to plug connection).


Procedure:

- 1) Using the plug wire tool, remove the connector from one of the three front spark plugs.
- 2) Remove the wire from the wire guide by pulling gently upwards, and disconnect the wire from the coil.
- 3) Now match the length of the old wire to a new Shock Therapy® wire, and install the new wire. At this point, wait until the other two wires are in place before trying to mount any clips. Repeat this process until all three wires for the front engine-bank are installed.



Plug wire tool engaged on connector end.

- 4) Using one of the longer screws to make each hole, and a shorter screw to mount, attach 3 dual and 1 single clip to the front wire guide as shown at right. The holes can be made in the raised section in the guide between the stock wire grooves. Note the clip positions in the illustrations.
- 5) Using the remaining 3 dual clips and 3 long screws, complete the installation for the Shock Therapy® wires for the rear engine bank by essentially repeating the process used in step 3.

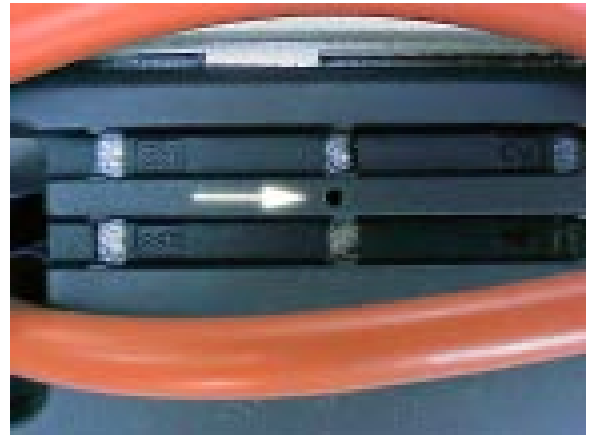

Close-up of typical hole position in wire guide.



Close-up view of front bank clip positions.



Completed front bank installation



Completed installation.