

A U T O T E C H

Installation Instructions

sport tuning

www.autotech.com

Part Number: 10.525.1825K
Description: Mk5 Adjustable Rear Swaybar Kit Instructions

TOOLS REQUIRED:


1. 8mm. triple square socket
2. 16mm. box wrench
3. 5mm. triple square socket
4. Jackstands
5. Floorjack

PARTS LIST:

1. 25mm. Tubular Mk5. Front swaybar
2. Powdercoated swaybar bushing brackets
3. Urethane Mk5 Swaybar bushing
4. Die Cut "AUTOTECH" sticker - white

Procedure:

1. Raise rear of car with floorjack and place jackstands under car using factory lifting and support locations. (Figure 1)
2. Remove the nuts that attach the end-links to the factory swaybar. (16mm. Box wrench & 5mm. triple square socket) (Figure 2)
3. Loosen and remove the bolts holding the swaybar bushing bracket (8mm. triple square socket)
4. Remove OEM swaybar w/ brackets and bushings
5. Grease the inside of the Autotech supplied bushings and slide them onto your new swaybar. (Waterproof Moly Grease) (Figure 3 & 4)
6. Attach swaybar endlinks to new swaybar with the nuts finger tight. (Adjustment Chart)

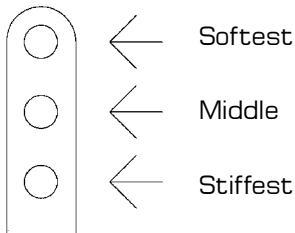

7. Swing swaybar up near the subframe and install brackets over bushings. (Figure 5)
8. Tighten the bracket bolts.
9. Tighten endlink nuts.
10. Lower car onto ground.



Figure 1

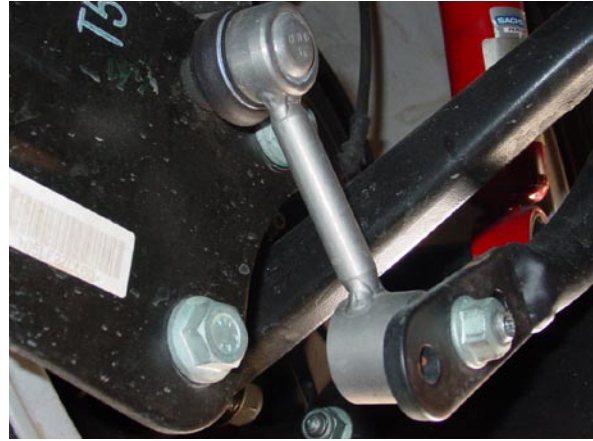


Figure 2

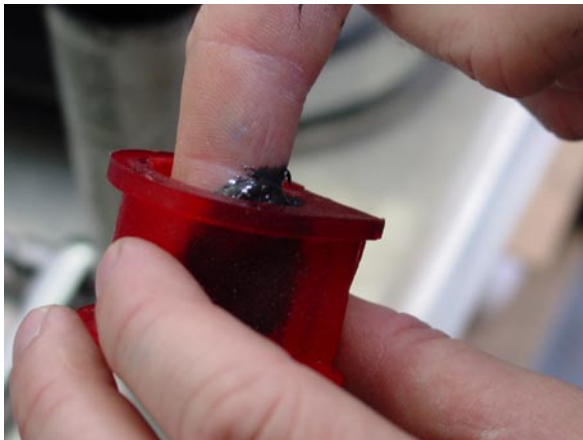


Figure 3

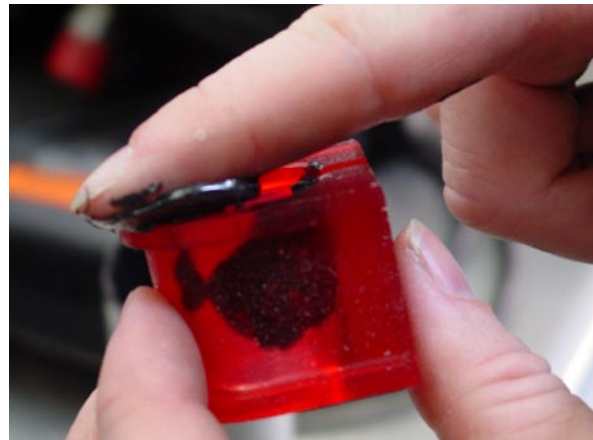


Figure 4

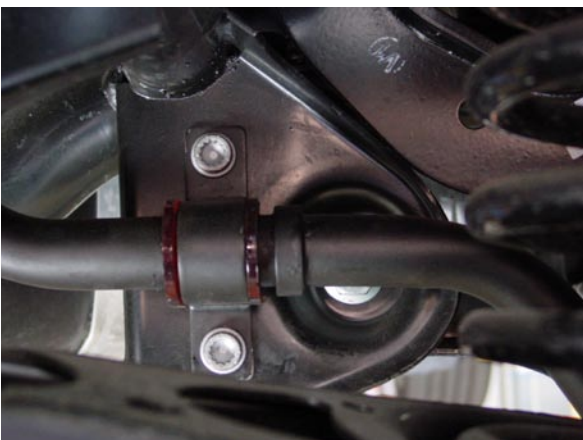


Figure 5